
HOZAN

ヒーター(H-869-230/H-860-230用)

H-861-230

HEATER
for H-869-230/
H-860-230




MADE IN JAPAN

ホーサン株式会社


23.09

Replacing heater

- 1 Unscrew the handle set screw and slide the handle back.
- 2 Loosen the nuts which connects the power cords with the lead wires of the heater, and reassemble them.
- 3 Unscrew the tip set screw and the heater set screw to remove the tip and the heater.

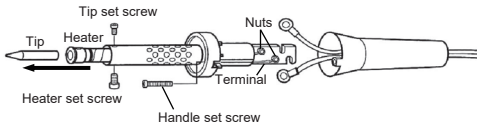

- 4 Reset the new heater and assemble the soldering iron as it was before.

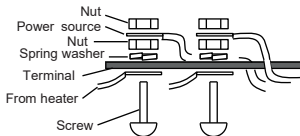

Completion



The heater leads and the power cords must be set on the same surface of the terminal.

Precautions

⚠ Caution

1. A new heater smokes when first use, but this is not a trouble. The smoke will stop thereafter.
2. Before replacing the heater, switch off and allow to cool.

HOZAN TOOL INDUSTRIAL CO.,LTD.

1-2-12 Saiwaicho, Naniwa-ku, Osaka 556-0021, Japan
<https://www.hozan.co.jp/E/> E-mail : th@hozan.co.jp