
HOZAN

ヒーター(H-250-230/H-252-230用)

H-251-230

**HEATER
for H-250-230/
H-252-230**




MADE IN JAPAN

ホーザン株式会社


23.09

Replacing heater

- 1 Unscrew the handle set screw and slide the handle back.
- 2 Loosen the nuts which connects the power cords with the lead wires of the heater, and reassemble them.
- 3 Unscrew the tip set screw and the heater set screw to remove the tip and the heater.

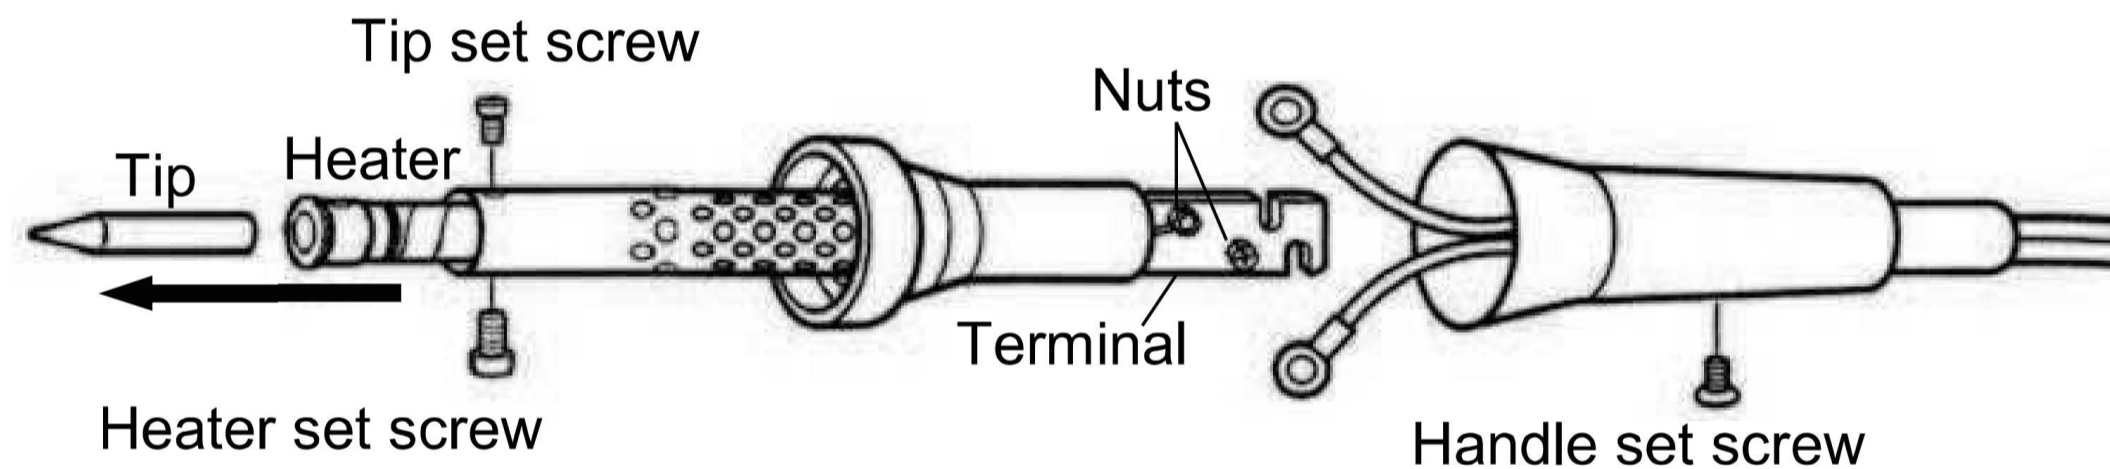

- 4 Reset the new heater and assemble the soldering iron as it was before.

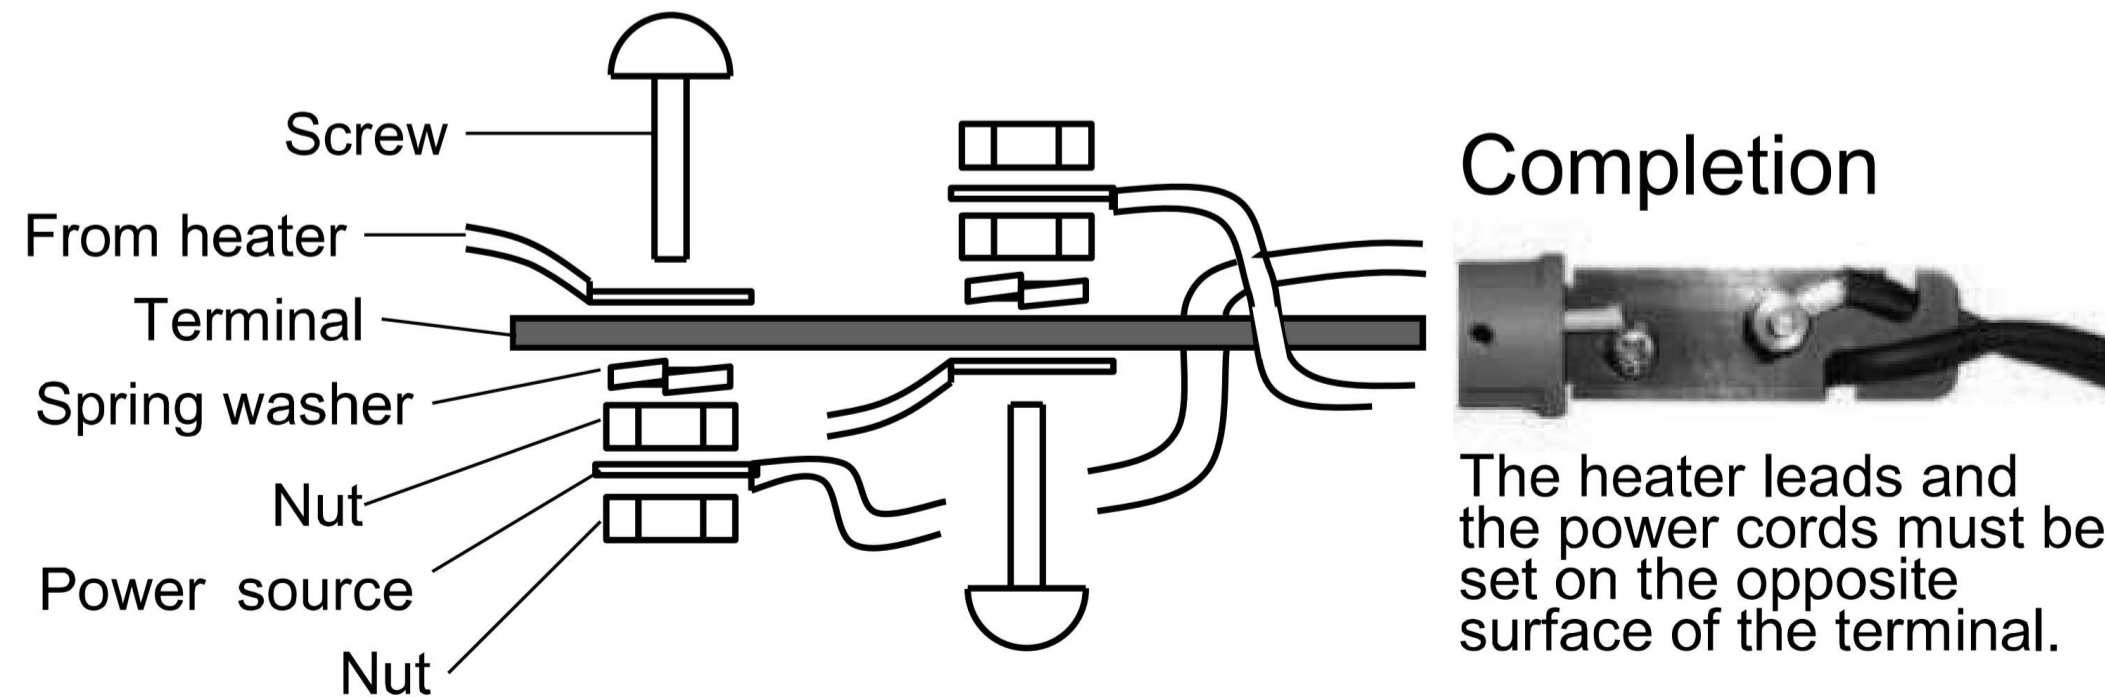

Precautions

Caution

1. A new heater smokes when first use, but this is not a trouble. The smoke will stop thereafter.
2. Before replacing the heater, switch off and allow to cool.

HOZAN TOOL INDUSTRIAL CO.,LTD.

1-2-12 Saiwaicho, Naniwa-ku, Osaka 556-0021, Japan

<https://www.hozan.co.jp/E/> E-mail: th@hozan.co.jp