

HOZAN

H-271-230

HEATER

(for H-270-230)

PRODUCT
INFORMATION

 


Replacing heater

⚠ Caution

Work under unplugged and cooled condition.


- 1** Turn the tip set screw about twice and pull out the tip.



- 2** Unscrew the handle set screws (3 pcs) and remove the handle cover.



- 3** Take out the heater inside the handle and cut **(A)** span by a cutter.

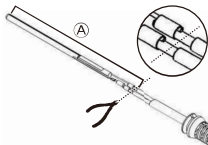


Replacing heater

⚠ Caution

Check the power cord for damage.


- 4 Strip the power supply cord (2 pcs) in 10mm.
- 5 Crimp the stripped power cord and the lead of the heater with the sleeve included.

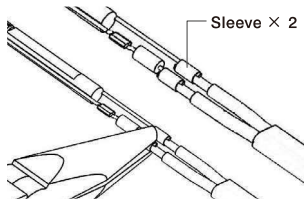

⚠ Caution

After crimping, ensure the heater does not slip out.

- 6 Set the heater, lead of the heater, and power cord as shown.
Put the lead wire in the partition to prevent short-circuit.
Make sure the spacer bottom touches the partition.

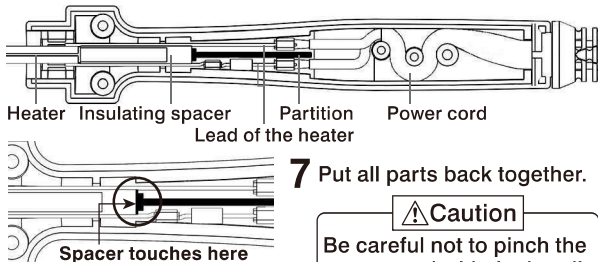

- 7 Put all parts back together.

⚠ Caution

Be careful not to pinch the power cord with the handle cover.

HOZAN CO., LTD.

1-2-12 Saiwaicho, Naniwa-ku, Osaka 556-0021, Japan
<https://www.hozan.co.jp/E/> E-mail: th@hozan.co.jp